





# Operating manual

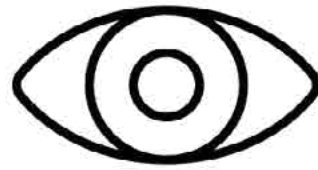




Safety **P 4**

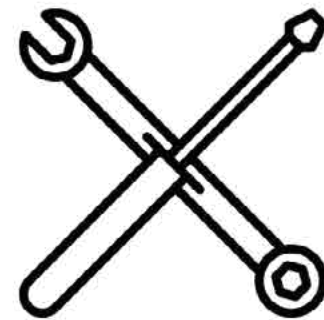


Guarantee **P 6**

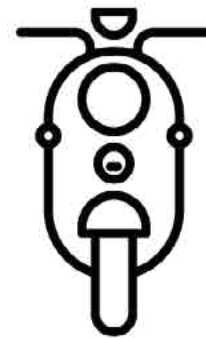

Your unu **P 9**



Alertness **P 14**

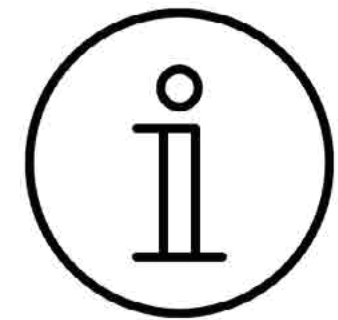

Index **P 15**



## Congratulations on your new unu!

### Welcome

We are glad that as of today you are part of the unu family and that you want to enjoy a new way of conquering your city. Our conviction is that urban mobility should be fun, affordable and environmentally sustainable and we're happy that you see things similarly.

At unu we place great importance on excellent service. If you should have any problem with your scooter our helpful Support Team stands ready to assist. We'll make sure you are back on the road as soon as possible. So that your scooter remains as long as possible in top condition we have worked out an Inspection Plan which you will have received with your unu. This ensures that whatever the season you can ride your unu in your city.

### Getting to know your unu

At unu we firmly believe that for every challenge there is a suitable solution. So that you can get to know your unu better, and before you ride off for your next adventure, we suggest that you have a look through this Operating Manual.

Our hope is that every day you will have as much enjoyment with your unu as we do. If you want to share with us your unu experience, send us an email, call us on the phone or simply drop in to visit. We'll always be happy to hear from you!

 
Your unu team

### Contact

If you have questions or need support just send an email or call us:  
Email: [support@unumotors.com](mailto:support@unumotors.com) | Telephone: +49 (0) 30 220121299



## Safety



### Safety rules

Our wish is that you and those around you experience everyday life without coming to harm. For this reason we ask you to give your attention to some points to keep in mind when you are on the road with your unu.

### Traffic regulations

Obey the traffic regulations when you are conquering your city on your unu. We understand that you will sometimes be in a hurry, but this should not mean putting yourself or others in danger. We believe that it is possible to reach your destination quickly, to discover your city in new ways, when your driving is considerate of others and you are relaxed. Take the time you need and make sure your headlight is on even during daylight hours - that is legally required. When on the road with your unu make sure you have the following documents with you: identity card, insurance documents, license plate attached and your unu operating license.

### Driving license

Your unu is certified for two persons, although you are obliged to make sure that your passenger or any luggage you may be carrying is properly secured. You may drive an unu when you have one of the following driving licenses: Class M or A1 (from age 16), Class A, B (from age 18, former classes 1, 1a, 1b, 2, 3 and 4).



## Fitness to drive

When you are on the road with your unu please refrain from the consumption of any drugs or alcohol or the use of medications which can affect your fitness to drive. You would endanger not only yourself but also others!

## Helmet requirement

When driving always wear a helmet so that in the event of an accident you are protected from the most grave consequences.

## Energy recovery

Your unu has bi-directional energy flow. This function is known as KERS (Kinetic Energy Recovery System) and is a technology known from Formula One racing. Each application of the brakes results in energy being fed back into the battery. In order to achieve optimum range, use of the brakes should be thoughtful and anticipatory.

## Weather

There is no such thing as the wrong weather for driving your unu. However you should pay attention when there is rain, snow or storm! When the road surface is wet or difficult this has implications for you as a driver. In such circumstances you should drive at a lower speed and with due caution. If you have to make longer journeys in the rain or if you have given your unu a thorough washing, test your brakes and apply them often enough to get them 'dry' to ensure correct braking performance on your ride.



## Guarantee



### Warranty and guarantee

- 1 The legal warranty provisions are fully applicable. In addition as customer you benefit from a two-year guarantee for your unu and battery. If you are a business person our guarantee is extended for twelve months (see <https://unumotors.com/warranty>).
- 2 In order not to lose guarantee coverage for your battery, take it indoors where it's warm when outside it is especially cold (temperature lower than -10° Celsius). When your unu is not driven for a longer period, make sure that your battery is fully recharged no later than every two months.
- 3 If you or any other person not authorized by us undertakes repairs to your unu, makes modifications or otherwise works on your scooter, the repaired or modified vehicle will no longer qualify under the guarantee nor will our guarantee cover product defects which may result from such inappropriate usage or improper activity.
- 4 Claims for defects cannot be assigned or transferred to others.

In the event that you operate your unu in a manner not conforming with the regulations, the guarantee becomes null and void. This is also the case when you enhance the performance or increase the speed of your scooter, if you exchange or modify the lighting fixtures, acoustic signals or rear-view mirrors. Such acts are punishable and prosecution can be a consequence. Do not resort to such measures and stay out of trouble. Alteration of the chassis number is also grounds for criminal and civil prosecution and as owner you will be seen as fully liable.

## Inspection

Your unu must undergo regular inspection so that you are always safe when driving and the guarantee cover remains valid. Make yourself familiar with the Inspection Plan you received together with the COC (Certificate of Conformity). A first inspection must be undertaken after 500 kilometres with further inspections after 4,000 kilometres, 7,000 kilometres and 10,000 kilometres - roughly every 3,000 kilometres - but at least once a year you should make an appointment at the garage. The inspection will cover the items listed. Consult your Inspection Plan for full details.

- |                         |                                  |
|-------------------------|----------------------------------|
| 1 Diskbrake             | 12 Rear wheel suspension         |
| 2 Brake fluid           | 13 Main motor cable harness      |
| 3 Drumbrake             | 14 Hinterradbefestigung          |
| 4 Brake hoses           | 15 Seat lock & handlebar lock    |
| 5 Wheels                | 16 Lighting                      |
| 6 Tyres                 | 17 Horn                          |
| 7 Wheel bearings        | 18 Moving parts & cable controls |
| 8 Steering head bearing | 19 Speedometer                   |
| 9 Screws & nuts         | 20 Battery                       |
| 10 Centre & side stands | 21 Charger                       |
| 11 Fork                 | 22 Function control              |

→ A map showing garage locations is available on our support page:  
[www.unumotors.com](http://www.unumotors.com)



## Attentiveness

It may seem tempting to ride your unu past stationary traffic but you should remember that this is not allowed. Always have both hands on the handlebars, both feet on the platform of your unu and under no circumstances stand up. Please avoid distractions and concentrate on your driving. Make sure you avoid running your scooter against obstructions such as kerbstones since this will cause needless damage. In traffic always make sure that you have sufficient distance from other vehicles and from pedestrians so that in an emergency you have room and time to apply the brakes.

## Technical data

Dimensions:	170 cm length; 103 cm height; 66 cm width
Weight:	58 kilos
Akku:	9 kilos
KERS energy recovery:	Your unu has an expanded range through energy recovery.
Maximum load:	150 kilos
Maximum load luggage rack:	5 kilos

## Tyre pressure

We suggest that you should check your unu regularly before your journeys. You should pay particular attention that the brakes work correctly, that the tyre pressure is adequate (between 2.0 and 2.5 bar) and that your lights and horn are in working order.

## Your unu



# Overview



## Battery

The battery is the beating heart of your unu. Take good care of it and it will provide electrical power for a long time. It is made of lithium-ion cells with a high energy density. As a result it is not only efficient but at only 9 kilos light in weight. You can take your battery with you wherever you please.

## Charging

Remove the battery from your unu and connect the charger unit to an electric outlet. Plug the blue connector into the battery and turn on the charger unit (the switch is on the side where the connection to the electricity outlet is located). The battery tells the charger unit when it is fully charged and the process is complete. On the battery next to the charger connection there is a press button below an LED display. When you press the button, the LED array will show the charging status (four green and one red indicates that the battery is fully charged).

## Brakes

Generally you should apply both brakes carefully and simultaneously. Never use only the rear wheel brake and you should not set the back wheel screw so tightly that it blocks the rear wheel. Avoid an abrupt full braking, especially on wet or slippery roads or on a gravel surface, otherwise your unu can break away in a skid. Brake pads need a break-in period to achieve maximum brake power and to prevent vitrification. If possible during the first 100 kilometres try to avoid prolonged brake application and only gradually increase the intensity of braking actions. If you often drive on gravel or on streets that have been gritted you should regularly clean the brake disc with a neutral cleansing agent in order to remove any accumulation of abrasive dirt. The rear wheel is fitted with a drum brake while the front wheel has a hydraulic disc brake which calls for a renewal of brake fluid once per year. You can do this yourself or go to the closest garage.



## Vehicle operation

When your unu is delivered the battery is already in the compartment beneath the seat. When you make the connection with the cable provided the battery can function. You will hear a light click when this is the case. The charge status will be shown in the display so that you are always informed of the range your battery will permit. When close to the red zone is indicate you should recharge the battery as soon as possible.

## Centre stand

In order to set your unu on its centre stand, take hold of the handlebars with your left hand and grasp the luggage rack with your right hand. Place your left foot on the stand assembly and pull the scooter backwards until it rests in place.

## Handlebar lock

Turn the handlebars to the left, put the key in the lock and turn it all the way to the left in order to activate the handlebar lock.



## Side stand

Even when seated on your unu you can fold out the side stand and thereby activate a cutting off of electricity supply to the motor. When setting the scooter on its side stand pay particular attention that your unu will be stable, that the ground is firm and that the unu will stand at an angle at least 5° from the vertical and, if on a slope, facing uphill.

## Opening seat compartment

Turn the key, noting a certain resistance, from the 'Off' position to the left, without pressing the key into the lock (see Handlebar lock). You will hear a faint click when the compartment opens.

## Mirrors

The positioning of the mirrors can be adjusted manually. The construction functions with a reverse screw system. Install the mirrors in the threaded inlets provided left and right on the handlebars and turn them on their own axes counter-clockwise. Adjust the positioning as required and then tighten the nut. Your mirrors should always give you a good view of the traffic situation behind you.

## Ignition lock

Turn the key to the right to start the motor. You will hardly hear anything but the light array in the charging status display of the speedometer will show that your unu's motor is running. Turn the key to the left to switch the engine off.



## Be alert to your unu

Your unu wants to be a long-lived companion. Look after it and be alert to its condition over time. We want you to have fun with your scooter and not be inconvenienced by constant maintenance. But there are things you need to be alert to. Provided that you respect the Inspection Plan everything should be uncomplicated. However if there is any sign of a problem do not hesitate to get in touch at [support@unumotors.com](mailto:support@unumotors.com).

## Maintenance

It is best to wash your unu just with water. The bodywork can be polished with a microfibre cloth. The seat should be cleaned with a damp cloth. If there is significant amount of dirt to be removed, use a soap-free liquid, for example a non-aggressive glass cleaner. Just like you, your battery does not like the cold. If you tend not to use your unu much in winter, please remember to recharge the battery to at least half its capacity every two months, otherwise it can become deep-discharged and permanently damaged. Regular charging is a condition of the guarantee. However it should be noted that your unu will not suffer in winter. You can always place it under a roof overhang or cover it with protective foil.

## Alertness



# Index



**A**ccelerator throttle 10  
Alertness 14  
Attentiveness 9  
**B**attery 5, 6, 7, 9, 10, 11, 12, 14  
Brake 5, 7, 9, 10, 11  
Brake fluid 7, 11  
Brake hoses 7  
**C**able controls 7  
Centre stand 10, 12  
Charger 7, 11  
Charging 11  
Contact 3, 14  
Contents 2  
**D**isc brake 7, 10, 11  
Driving license 4  
Drum brake 7, 10, 11  
**E**nergy recovery 5

**F**itness to drive 5  
Fork 11  
Front wheel 10  
Front wheel brake 10, 11  
Function control 7  
**G**uarantee 6, 7, 14  
**H**andlebar lock 7, 12  
Headlamp 10  
Helmet requirement 5  
Horn 7, 10  
**I**gnition lock 10, 13  
Index 15  
Inspection 3, 7, 14  
**L**icense plate 4, 10  
Lighting 6, 7  
Luggage rack 9, 10, 12  
**M**ain motor cable harness 7  
Maintenance 14  
Mirrors 6, 10, 13  
Moving parts 7

**N**uts 7, 13  
**O**pening seat compartment 12, 13  
Overview 10  
**R**ear light 10  
Rear wheel brake 7, 10, 11  
Rear wheel suspension 7, 10  
**S**afety 4, 5, 13  
Safety rules 4  
Screws 7  
Seat 4, 10, 12, 13, 14  
Shock absorbers 10  
Side stand 7, 10, 13  
Speedometer 7, 10, 13  
Speedometer cable 10  
Speedometer drive 10  
Steering head bearing 8  
**T**echnical data 9  
Traffic regulations 4  
Turn indicator 10  
Tyres 7, 9, 10

**V**ehicle operation 12  
**W**arranty 6  
Weather 5  
Welcome 3  
Wheel bearings 7  
Wheel rims 10  
Wheels 7  
**Y**our unu 9



be unusual

[www.unumotors.com](http://www.unumotors.com)